

Installation instructions, accessories - Activity bag

Volvo Car Corporation Göteborg, Sweden



S80 (-06) / V70 XC (01-) / XC70 (-07) / S60 / V70 (00-08) / XC90 / S40 (04-) / V50

Section	Group	Weight (Kg/Pounds)	Year	Month
8	82		2000	05

S40 (04-) 2004, S60 2001, S60 2002, S60 2003, S60 2004, S80 (-06) 1999, S80 (-06) 2000, S80 (-06) 2001, S80 (-06) 2002, S80 (-06) 2003, S80 (-06) 2004, V50 2004, V70 (00-08) 2000, V70 (00-08) 2001, V70 (00-08) 2002, V70 (00-08) 2003, V70 (00-08) 2004, V70 XC (01-) / XC70 (-07) 2001, V70 XC (01-) / XC70 (-07) 2002, V70 XC (01-) / XC70 (-07) 2003, V70 XC (01-) / XC70 (-07) 2004, XC90 2003, XC90 2004



H8200082



Required tools

MA Feedback

Any comments on this publication? Please contact your nearest dealer. Thank you!

Publication no: MA 3497763, Issue: 2000-05
Comments:.....
From:.....
Address:.....
Telephone no:.....
Telefax:.....



INTRODUCTION

Activity bag

- **NOTE! Read through the entire text before carrying out any work.**
- The front page gives the date of this edition and the edition it replaces
- The second page shows the tools needed for the installation and the contents of the installation kit
- The illustrations display the procedure in order of operation. The order of operation is repeated in the text section
- Cut out the text page in order to follow the illustrations and text at the same time.



1



H8200083

- Pull the straps through the main support. Secure the straps
- Press the bag upwards. Tighten the straps if necessary.

2



H8200084

- The bag can also be used as a rucksack
- Tighten the straps as illustrated
- Position the bag on your back. Tighten the straps if necessary.