



# VOLVO XC90 QUICK GUIDE



## WELCOME TO YOUR NEW VOLVO!

Getting to know your car is an exciting experience.

Browsing through this Quick Guide will further enhance your approval of your new Volvo. The detailed information is in the Owner's Manual.

Warning texts and other important information is only in the Owner's Manual, not in this folder. The Owner's Manual contains the most important information.

Options are marked with an asterisk (\*).

## KEY & REMOTE CONTROL



### SERVICE KEY

Only works for front door, ignition switch and steering lock.

1. Automatic relocking takes place if a door/boot lid is not opened within 2 minutes after unlocking.
2. The time is adjustable to 30, 60 or 90 seconds, see Owner's Manual.

**LOCK** Locks doors and fuel filler flap/tailgate and arms the alarm\*.

**UN-LOCK** Unlocks doors, fuel filler flap/tailgate and disarms the alarm <sup>1</sup>.



Unlocks tailgate. (Tailgate does not open.)



Switches on lighting for 30 seconds <sup>2</sup> in side mirrors\*, in cabin, by feet and on number plate. Indicators and parking lamps illuminate.



**"Panic" button.** Press and hold for approx. 3 seconds in an emergency to trigger the alarm. Switch off the alarm with **UNLOCK**.

## COLD START



### NOTE

The idling speed may briefly be slightly higher in order to achieve efficient emission control.

## AUTOSTART (only 3.2 and V8)

Turn the ignition key/dial to position **III** and release. The engine starts automatically.

**Diesel engines** must always be preheated in position **II** before the engine is started.

## INSTRUMENT OVERVIEW



**1** Control panel driver's door, central locking

**2** Lighting, handbrake

**3** Trip computer, main beam and indicators

**4** Cruise control

**5** Combined instrument panel

**6** Keypad\* audio system, phone\*

**7** Interior lighting. Controls, sunroof\*

**8** Hazard warning flashers

**9** Bonnet, opening handle

**10** Door opening handle

## CONTROL PANEL IN DRIVER'S DOOR



- L R** Adjusting the door mirrors, select **L** or **R**. Set with the lever.
- 1** → **Manual windows**
- 2** → **Automatic windows**
- **Locks/unlocks all doors, fuel filler flap/tailgate.**
- ✗** **Deactivates rear power windows.**

## ACTIVE BI-XENON LIGHTS, ABL\*



With ABL the headlamp pattern follows steering wheel movement.



**Deactivate/activate** ABL by pressing the button. ABL is only active in darkness and when the car is being driven.

## REFUELLING



**Hang up the fuel cap** during refuelling.

## REGENERATION (DIESEL)

Diesel cars are equipped with a particle filter, which results in more efficient emission control. The particles in the exhaust gases are collected in the filter during normal driving. So-called "regeneration" is started automatically in order to burn away the particles and empty the filter. Engine power may be slightly reduced during regeneration.


## EBA, EMERGENCY BRAKE ASSIST

Emergency Brake Assistance helps to increase brake force and so reduce braking distance. When EBA is activated the brake pedal lowers slightly more than usual, depress (hold) the brake pedal as long as necessary. If the brake pedal is released then all braking ceases.

## CAR CARE

Washing by hand is gentler to the paintwork than an automatic car wash. The paintwork is also more sensitive when it is new. Handwashing is recommended during the first few months.

## AUDIO SYSTEM

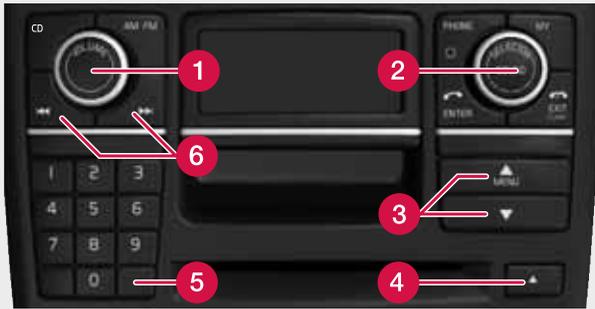

- 1 On/Off and audio volume.** Press for On/Off. Turn to adjust the audio volume. Audio volume for radio, TP, phone\* and RTI\* are stored individually.
- 2 Sound pattern.** Press to select e.g. BASS, Dolby II\* or SUBWOOFER\*. Turn to adjust.
- 2 Audio source.** Turn for **FM1, FM2, AM, CD** or **AUX** <sup>1</sup>.

### RADIO

- 5 Autostoring stations.** Press **AUTO** for approx. 2 seconds. The ten strongest stations are stored. Press **0–9** to select a station.
- 6 Search for station automatically/manually**  
One short press starts automatic search. One long press starts manual. One long press on **0–9** stores stations, FM1/FM2 store 10 stations each.

### CD PLAYER

- 3 Change CD disc<sup>2</sup>** (also buttons 1–6 on the keypad (5).
- 4 Ejecting a disc.** One short press ejects the current disc. One long press ejects all <sup>2</sup>.
- 6 Change track**  
1. AUX input for e.g. MP3 player.  
2. Only CD changer\*.


## LOWERING THE REAR SEAT BACKRESTS



### Third row of seats\* (cars seating seven)

Slide the second row of seats to its front position.

- A. Lift the handle up.
- B. Slide the seat cushion into its rearmost position and fold in the lashing eyelets.
- C. Fold the backrest forward.

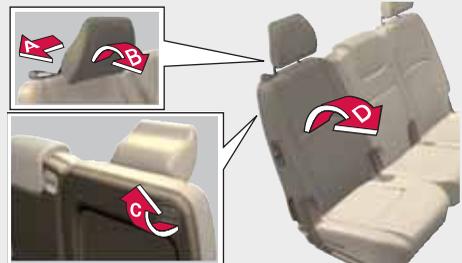


### Second row of seats

Set the seats in the rearmost position (only applies to cars seating seven).

- A. Pull out the eyelet.
- B. Lower the head restraint.
- C. Release the catch.
- D. Fold the backrest forward and press down to lock the backrest in lowered position.

The front passenger seat can also be folded down. See Adjusting the front seat in point 6.

## ELECTRONIC CLIMATE CONTROL, ECC\*

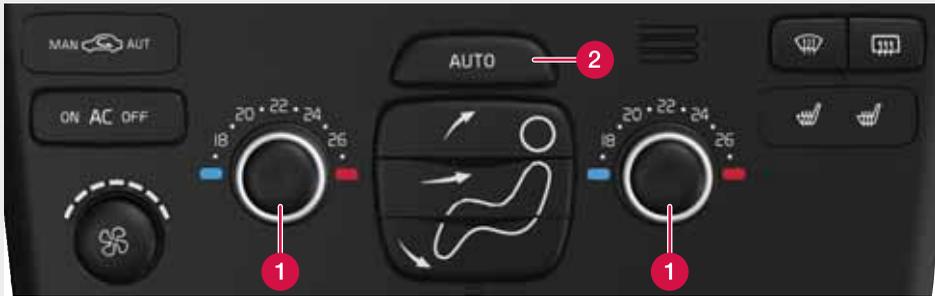

### AUTOMATIC CONTROL

In **AUTO** mode the ECC system controls all functions automatically making driving simpler with optimum air quality.

#### 1 Temperature

Turn to required temperature.

#### 2 Automatic

Press **AUTO** for automatic control of set temperature and other functions.

1. Rear window 12 minutes. Mirrors 6 minutes.

### MANUAL CONTROL



**Fan speed**



**Air distribution**



**Defroster** to quickly remove misting from the windscreen and side windows.



**Air quality system On** press **AUT**  
**Recirculation On** press **MAN**

**AC**

**Air conditioning On/Off**



**Rear window** and door mirror defrosters.  
Automatic deactivation <sup>1</sup>.

## PACOS, DEACTIVATING THE AIRBAG\*



### WARNING

Incorrect use can endanger life. Consult the Owner's Manual in the event of the smallest uncertainty regarding usage.

### PACOS (Passenger Airbag Cut Off Switch)

Use the ignition key to switch **ON/OFF**.



#### **ON: The airbag is activated.**

Passengers taller than 140 cm can sit in the front seat but **never a child on a booster cushion or child seat.**



#### **OFF: The airbag is deactivated.**

**PASS AIRBAG OFF** is shown in the warning lamp above the interior rear-view mirror.

A child can sit on a booster cushion or child seat in the front seat but **never passengers taller than 140 cm.**

## TRIP METERS AND TRIP COMPUTER



### TRIP COMPUTER

- 1 Display for trip computer.** Set the trip computer using (9).



- 8 Press** to clear a message.
- 9 Turn** to show e.g. RANGE TO EMPTY FUEL TANK in the display (1).
- 10 Resets** current function



### IMPORTANT

Range to empty fuel tank is an estimate of possible distance based on earlier driving conditions.

### FUEL

- 6 Fuel gauge**
- 7 Low fuel level**  
The lamp illuminates when 8 litres of fuel remain in the tank (diesel cars: 7 litres).

### TRIP METERS

- 3 Display** shows two independent trip meters, T1 & T2.
- 2 Switch between T1 & T2** with one short press. Reset current meter with one long press.

### CLOCK

- 5 Turn to stop** and hold to set the clock (4).

## INDICATOR AND WARNING LAMPS



### Read in information display



**Stop safely.** Rectify the fault as per information display.



**Low oil pressure.** Stop safely. Check the oil level <sup>1</sup>.



**Low tyre pressure (TPMS)\*.** Inflate the tyres.



**Fault in brake system .** Stop safely. Check the brake fluid <sup>1</sup>.



**DSTC\* stability system .** Flashes when the system is operating.

1. Have the car towed if the symbol remains visible.

## LIGHT SWITCHES

- 0** **Automatic dipped beam.** Main beam flash. Main beam cannot be activated.
-  **Parking lamps**
-  **Dipped beam.** Dipped beam switches off when the ignition is switched off. Main beam can be activated.
-  **Headlamp levelling** (automatic for Bi-Xenon lights\*)
-  **Display and instrument lighting**
-  **Front fog lamps**
-  **Rear fog lamp** (one lamp)
-  **Main beam flash**
-  **Main/dipped beam switching.** Approach lighting.



## DIRECTION INDICATORS



- A. Short sequence, **three flashes.**
- B. **Continuous** flash sequence.

## ADJUSTING THE STEERING WHEEL



**WARNING!** Adjust the steering wheel before setting off, never while driving.

## RAIN SENSOR\* AND WINDSCREEN WIPERS



### RAIN SENSOR

- 1** **Activates rain sensor** . Position **D-F** deactivates rain sensor.
- 2** **Adjust sensitivity** using the thumbwheel.
-  **Display symbol** for rain sensor **On**.

### WINDSCREEN WIPERS

-  **Single sweep**
- 0** **Off**
- D** **Intermittent wiping.** Turn (2) to adjust.
- E** **Normal speed**
- F** **High speed**
- G** **Windscreen and headlamp washing**
- H** **Rear window washer**
- 3** **Rear window wiper** intermittent/normal

