


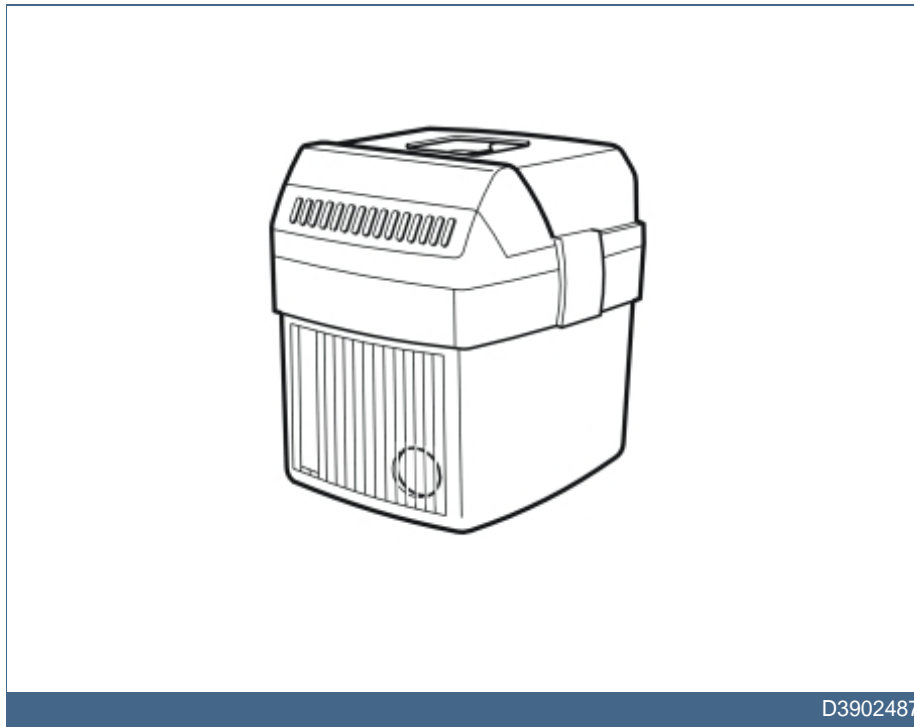

**S80 (-06) / V70 XC (01-) / XC70 (-07) / S60 /
V70 (00-08) / XC90**


Section	Group	Weight (Kg/Pounds)	Year	Month
8	88		2001	05

S60 2001, S60 2002, S60 2003, S60 2004, S80 (-06) 1999, S80 (-06) 2000, S80 (-06) 2001, S80 (-06) 2002, S80 (-06) 2003, S80 (-06) 2004, V70 (00-08) 2000, V70 (00-08) 2001, V70 (00-08) 2002, V70 (00-08) 2003, V70 (00-08) 2004, V70 XC (01-) / XC70 (-07) 2001, V70 XC (01-) / XC70 (-07) 2002, V70 XC (01-) / XC70 (-07) 2003, V70 XC (01-) / XC70 (-07) 2004, XC90 2003, XC90 2004





Required tools

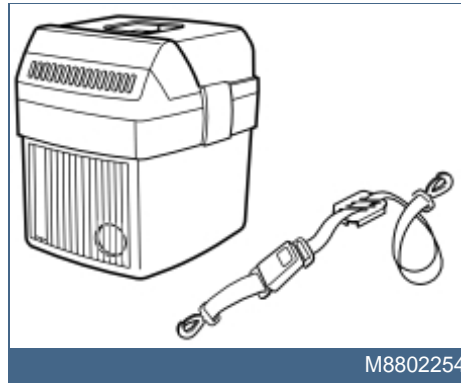

Any comments on this publication? Please contact your nearest dealer. Thank you!

Publication no: MA 8682209, Issue: 2001-05
Comments:.....
From:.....
Address:.....
Telephone no:.....
Telefax:.....




INTRODUCTION

Coolbox

- **NOTE! Read through the entire text before carrying out any work.**
- The front page gives the date of this edition and the edition it replaces
- The second page shows the tools needed for the installation and the contents of the installation kit
- The illustrations display the procedure in order of operation. The order of operation is repeated in the text section
- Cut out the text page in order to follow the illustrations and text at the same time.



1A

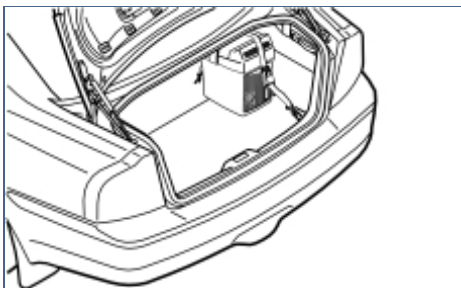

M8902020

Illustration A applies to the S60 and the S80


- Position the coolbox in the cargo compartment on the right-hand side as illustrated.

Illustration B applies to the V70

Illustration C applies to the XC90, second row of seats


Illustration C applies to the XC90, third row of seats

1B

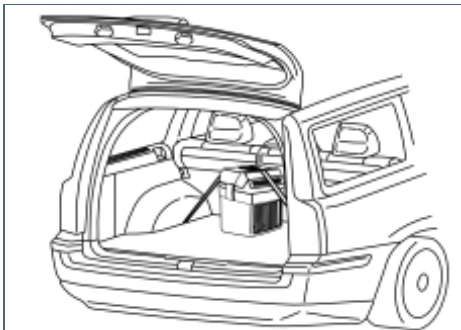

M8802255


1C

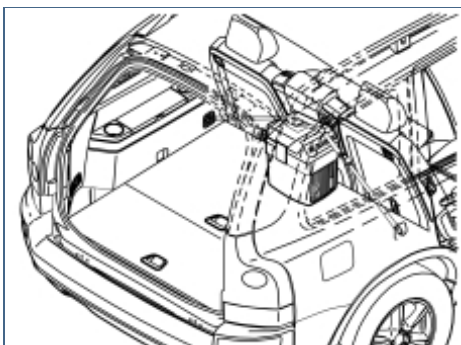

R8802710

- Position the coolbox in the cargo compartment behind the backrest, as illustrated.


1D

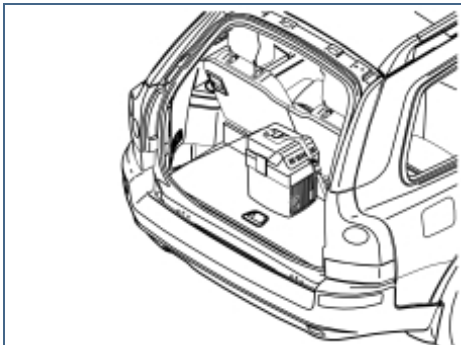

R8802711



2

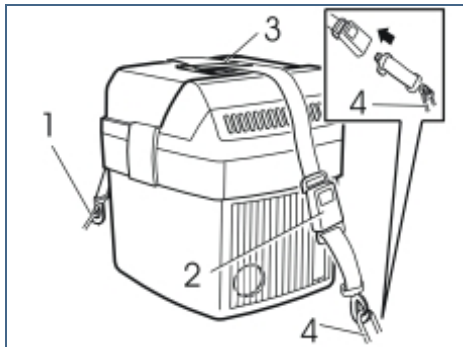

M3903239

Applies to S60 and S80

- Install the long strap hook in the front mounting eyelet (1) in the cargo compartment. Allow the strap lock (2) to hang over the front side of the coolbox as illustrated
- Press the mounting (3) down into the handle of the coolbox
- Install the short strap hook in the rear mounting eyelet (4) in the cargo compartment
- Lock the straps together. Tighten so that the coolbox is secured in place.

Applies to the V70 and XC90

- Install the long strap hook in the left front (XC90 3rd row of rear seats) mounting eyelet (1) in the cargo compartment. Allow the strap lock (2) to hang over the right hand side of the coolbox as illustrated
- Press the mounting (3) down into the handle of the coolbox
- Install the short strap hook in the right hand front mounting eyelet (4) in the cargo compartment
- Lock the straps together. Tighten so that the coolbox is secured in place.

Applies to all cars

Note!

- Read the warning text on the coolbox.

Connect the coolbox to the electrical socket in the cargo compartment

- Check the function.