



XC90

Section	Group	Weight(Kg/Pounds)	Year	Month
8	88		2001	11

XC90 2003, XC90 2004



Required tools

Any comments on this publication? Please contact your nearest dealer. Thank you!

Publication no: MA 8682150, Issue: 2001-11
Comments:.....
From:.....
Address:.....
Telephone no:.....
Telefax:.....




INTRODUCTION

Cargo net, cargo compartment floor

- **NOTE! Read through the entire text before carrying out any work.**
- The front page gives the date of this edition and the edition it replaces
- The second page shows the tools needed for the installation and the contents of the installation kit
- The illustrations display the procedure in order of operation. The order of operation is repeated in the text section
- Cut out the text page in order to follow the illustrations and text at the same time.




1

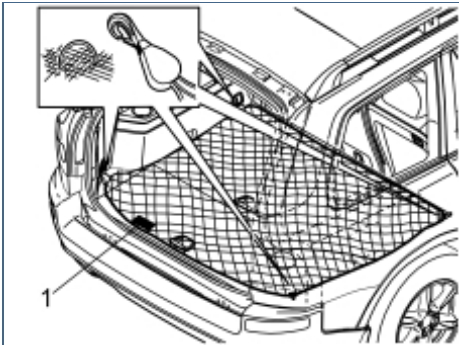

R8902479

- Hook the hooks onto the four mounting eyelets
- Ensure that the two longest sides of the net cross the cargo compartment floor
- The net label (1) must be positioned opposite the tailgate opening.

2

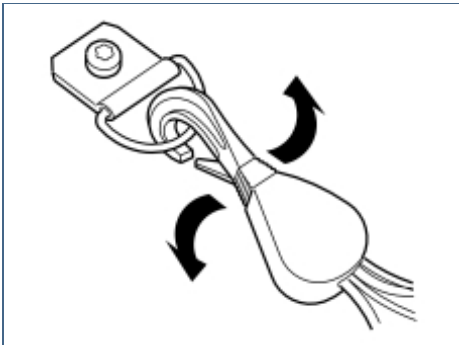

A8801869

- To remove the cargo net: Unhook the hooks from the eyelets.