




XC90

Section	Group	Weight(Kg/Pounds)	Year	Month
8	86		2001	11

XC90 2003, XC90 2004, XC90 2005, XC90 2006, XC90 2007, XC90 2008

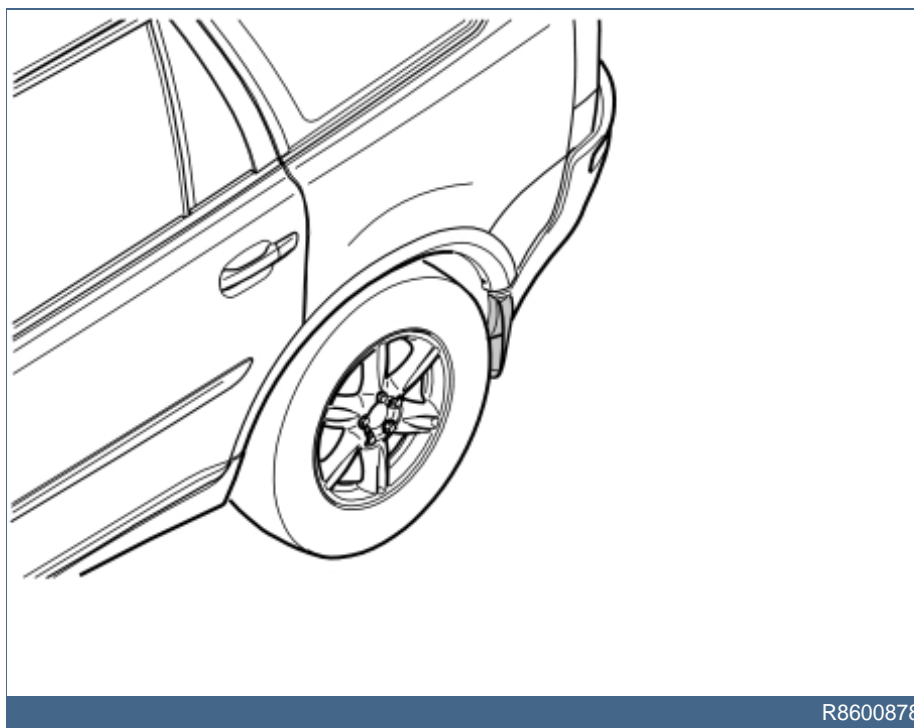

Installation instructions, accessories - Rear mudguard

Volvo Car Corporation Göteborg, Sweden



Required tools



A0000162




A0000163



Nm
lbf.ft

A0000161

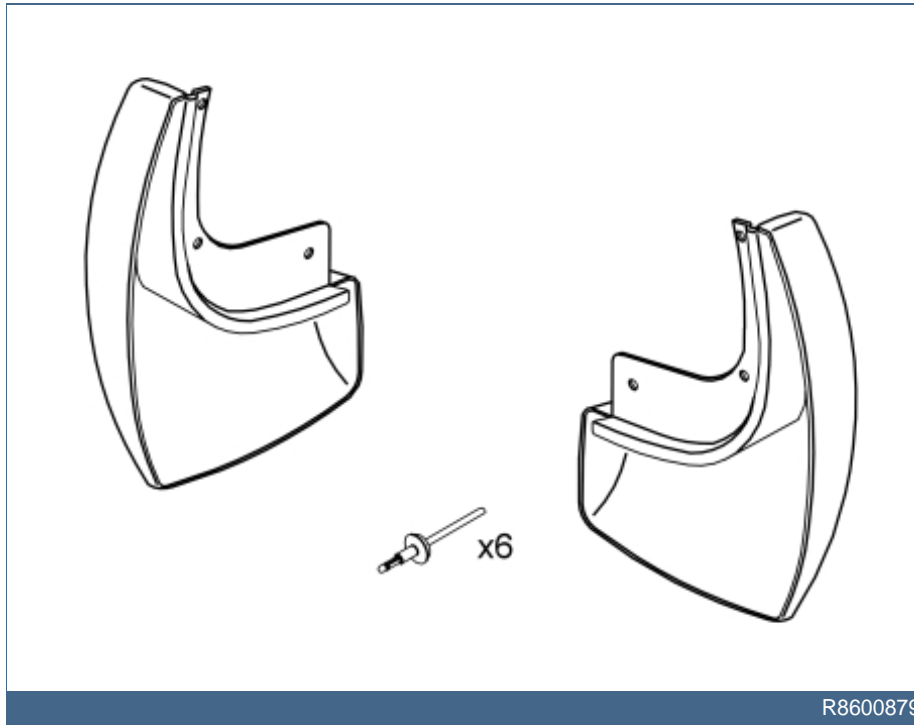

R8600879

Any comments on this publication? Please contact your nearest dealer. Thank you!

Publication no: MA 8622853, Issue: 2001-11

Comments:.....
.....
.....
.....
.....
.....
.....

From:.....

Address:.....

Telephone no:.....

Telefax:.....

Installation instructions, accessories - Rear mudguard

Volvo Car Corporation Göteborg, Sweden






INTRODUCTION

Rear mudguard

- **NOTE! Read through the entire text before carrying out any work.**
- The front page gives the date of this edition and the edition it replaces
- The second page shows the tools needed for the installation and the contents of the installation kit
- The illustrations display the procedure in order of operation. The order of operation is repeated in the text section
- Cut out the text page in order to follow the illustrations and text at the same time.




1

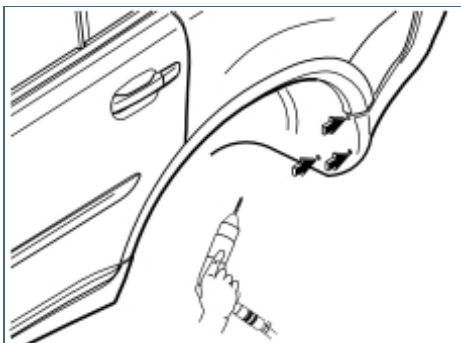

R8600880

- Raise the car
- Remove the rear wheels
- Carefully drill out the rivets holding the fender liner and the bumper cover. Use a **6 mm (1/4 ")** diameter drill bit. Do not damage any of the plastic components.

2

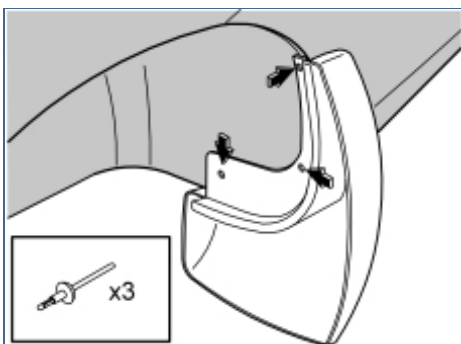

R8600881

- Rivet the mudguard in the fender liner and the bumper cover
- Reinstall the wheels. Tighten to **140 Nm (104 lbf.ft)**
- Lower the car.